


FDT

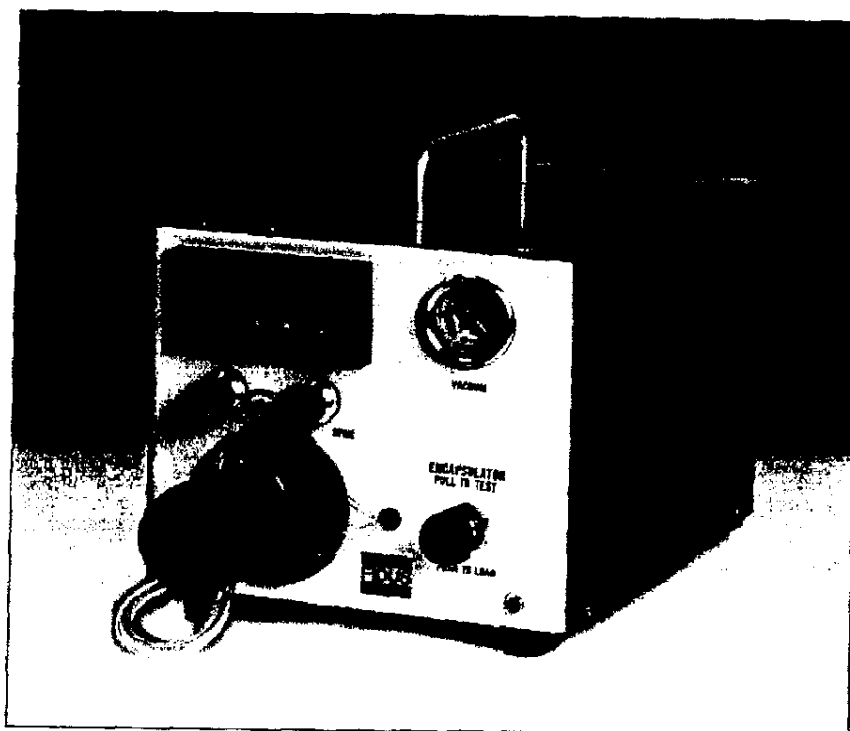

- Rapidly measures dilution (also known as ventilation) of finished cigarettes
- Rugged design and construction make the FDT ideal for production and laboratory environments
- Low cost quality control solution

Fidus Instrument Corporation's well-proven FDT is a compact design utilizing a CFO, with no moving parts, to regulate the air flow.

- CFO pneumatic circuit
- Instrument can be directly connected to a factory air supply (utilizing manufacturer installed internal vacuum generator), or via an optional external vacuum pump
- Easy service access

SPECIFICATION:

Range

0 - 100% dilution

Resolution

Dilution 1%

Accuracy

$\pm 1\%$ Dilution

Repeatability

Dilution 1%

Sample Size

Circumference 18 - 25 mm

Sample Area

7 to 21 mm from filter tip

Electrical Requirements

100-240 VAC, 50-60 Hz

Dimensions

8.25 x 10.0 x 7.0 inches (w x d x h)

209.5 x 254 x 178 mm (w x d x h)

Weight

14 lbs/6.36 kg (net excluding pump)

32 lbs/14.5 kg (gross shipping including pump)

OPTIONS:

RS232C serial interface

Vacuum Pump- 1/8 h.p. 115V, 60Hz, 0.09kW or 1/8 h.p., 220/240V, 50Hz, 0.09kW

Weight: 14.4 lbs (6.54 kg)

Silent running, long life

High altitude pump can be supplied upon request

Additional - Ventilation Standards



Fidus Instrument Corporation
7400 Whitepine Road
Richmond, Virginia 23237-2219
Tel. (804) 275-7850 Fax (804) 743-1108